




Someone bring me a scalpel

VISICOM OPERATING MODE #27

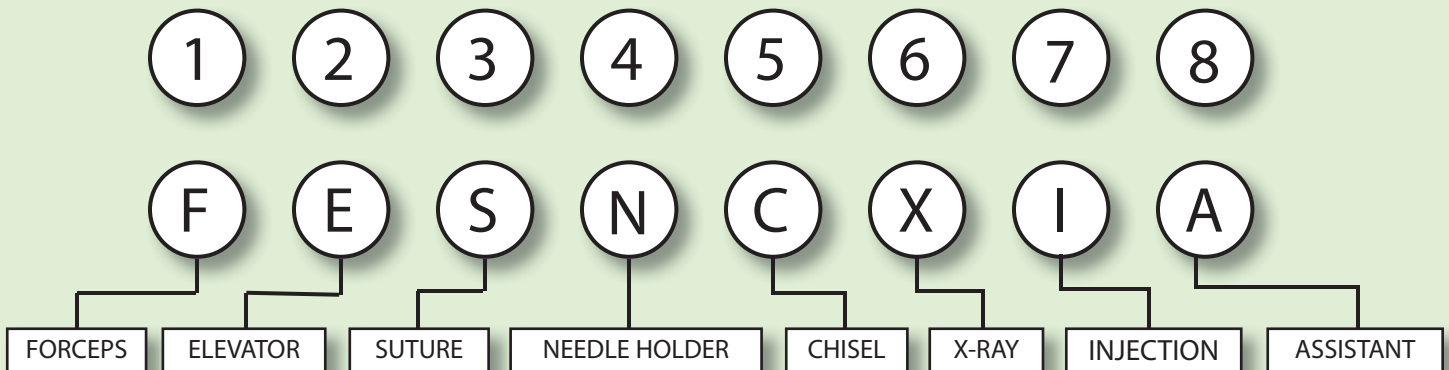

The communication needs of some practices include requests for a procedure or an instrument, such as a request for an X-ray, or needing someone to bring a specific instrument. Standard VisiCom 3000 units shipped after early 2012 include an alternate operating mode that may be useful for this purpose.

As illustrated above, each lower row button can be assigned a letter of the alphabet signifying whatever procedures or instruments are required. In the above example, pressing the first button on the bottom row would illuminate the letter “F” in the right segment of the display. Then, you would press a number on the top row of buttons indicating the room. Pressing top row button #1 would transmit the message “1F”, meaning in this example: *someone bring a forceps to room 1.*

Contact your VisiCom Customer Service Representative if you wish to configure newer VisiCom 3000 units for this purpose. A simple menu change is all that’s required. Of course, you give up the ability to use the bottom row buttons to clear messages, but you can still use the dedicated Clear button for that.

Once appropriately configured, the configuration is stored in flash memory and retained indefinitely because VisiCom units require no batteries. Customized VisiCom front-surface labels that include your selection of letter codes are available from United Communications. Please contact your VisiCom Customer Service Representative at 1-800-228-3400, ext. 134, if interested.